


INSTALLATION QUICK GUIDE

Below are the minimum space and installation requirements for the Boost 2.

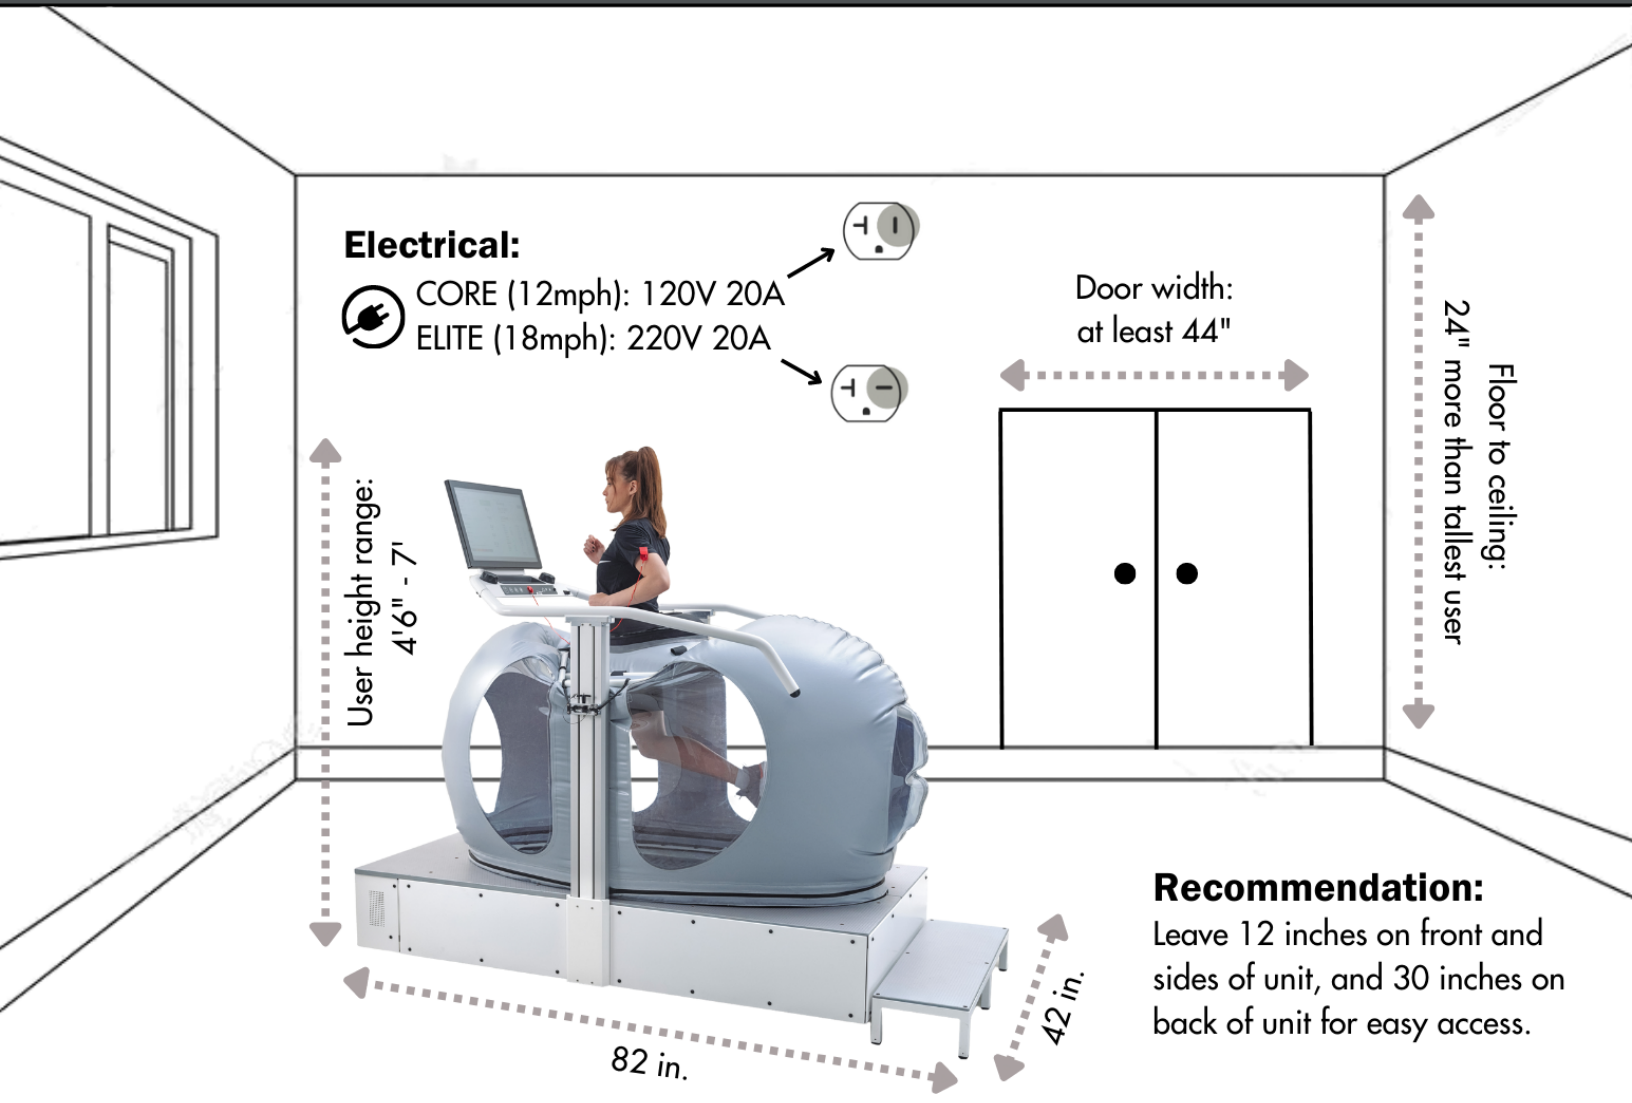

Installation Checklist:

- Electrical
 - I have a 110V / 120V 20A single phase dedicated circuit for my Boost 2 Core.
 - I have a 208V / 220V / 240V 20A single phase dedicated circuit for my Boost 2 Elite.
- Space
 - I have a ceiling that is 24 in. higher than tallest user.
 - I have a room that is at least 10.5 ft. x 5.5 ft.
 - The doorway(s) to entry is/are at least 44 in. wide.
 - The doorway(s) to entry is/are less than 44 in. wide.
- Delivery/Entry
 - > I have a loading dock or a forklift for delivery.